<u>Kyocera Network Fax Setup Instructions</u> Ver 2.0.0406
Outbound desktop faxing Ver 2.0.0406 for 2k/xp. This is for windows clients only and not supported on a server.
Download the fax desktop driver from
http://ca.kyoceramita.com/KMCAGlobalpub/jsp/Kyocera/resource_details.jsp?rid=13453

Save the file to a folder a on your pc.

Click **Save.**

The file will be saved.

Click **Open.**

Click **Setup.**

Click **Next.**

Pick your model and click **Next.**

Select a new name if desired and select **No** for default. Click **Next.**
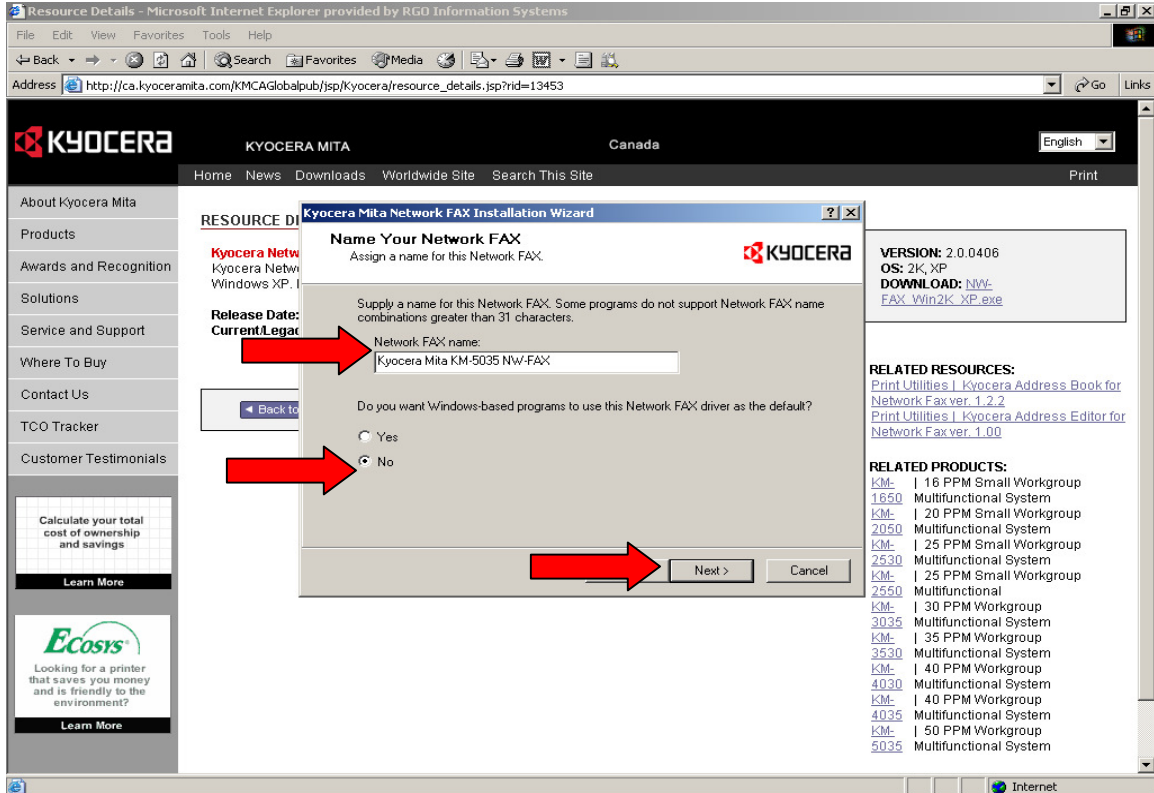
Click **Install.**
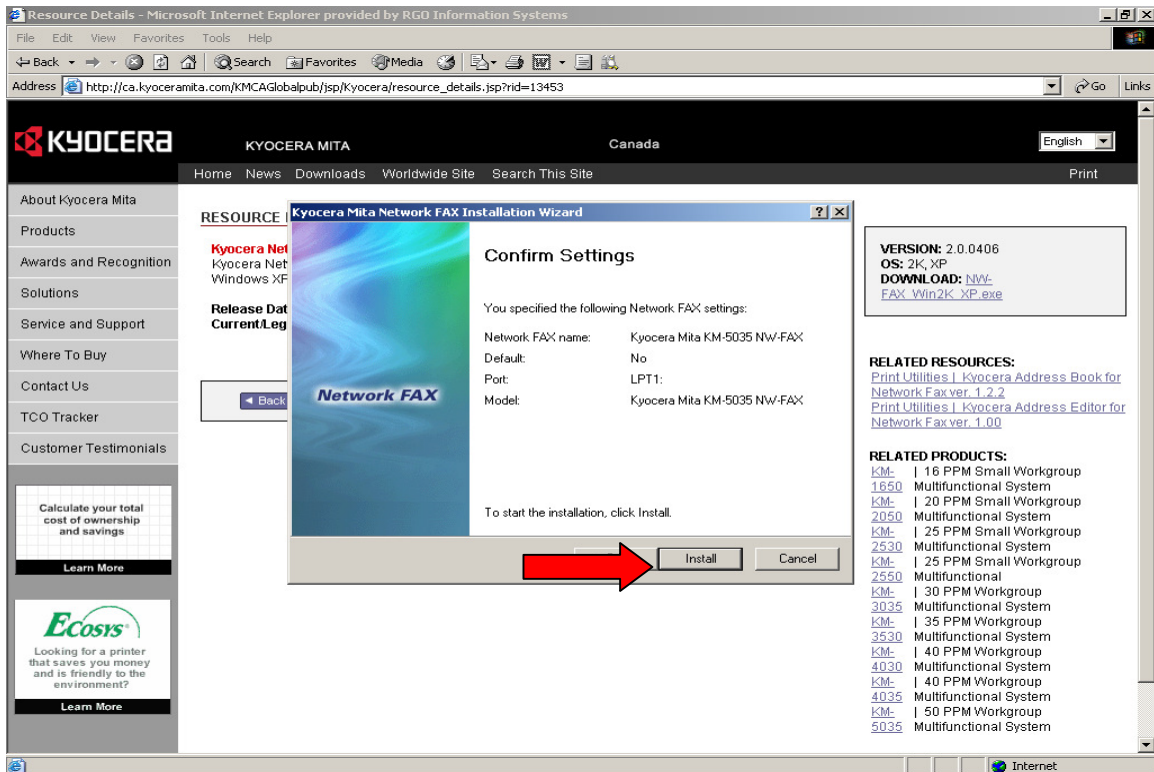
Click **No** and **Finish.**
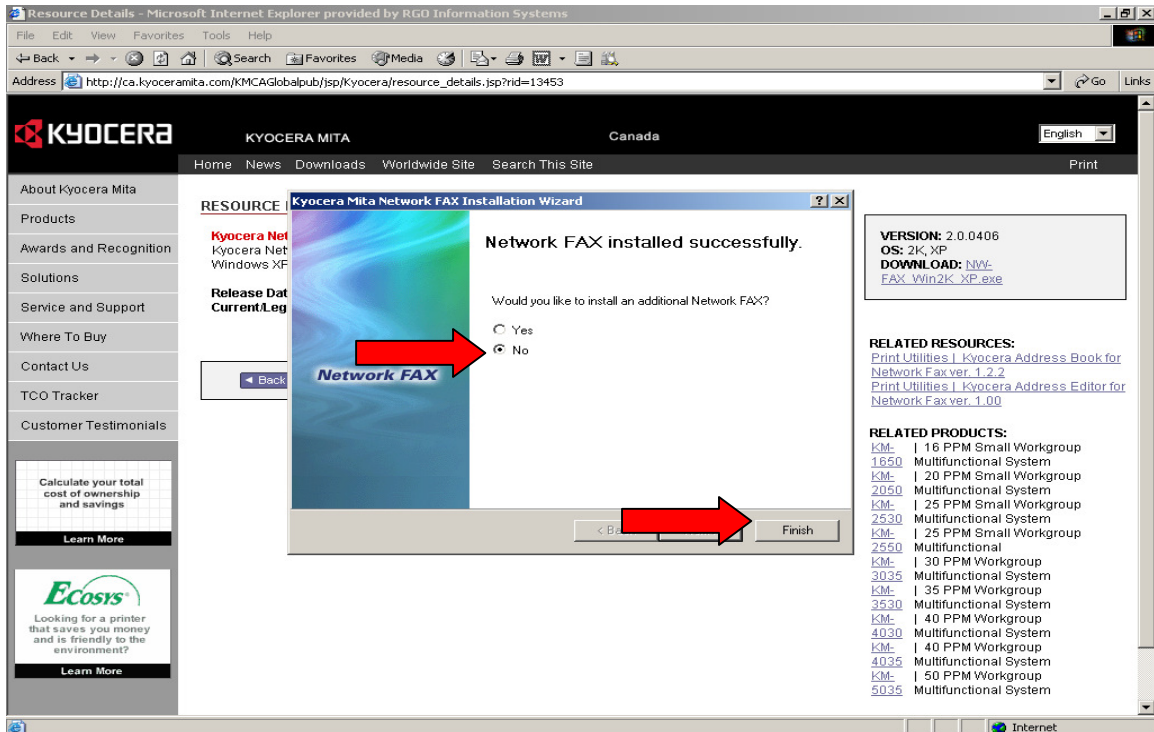
The driver is installed, but needs to be configured. **Open your printers' folder Right click** the printer and the **properties**, click the **advanced tab** and the **Printing defaults. Click** the **Fax TX** setting.
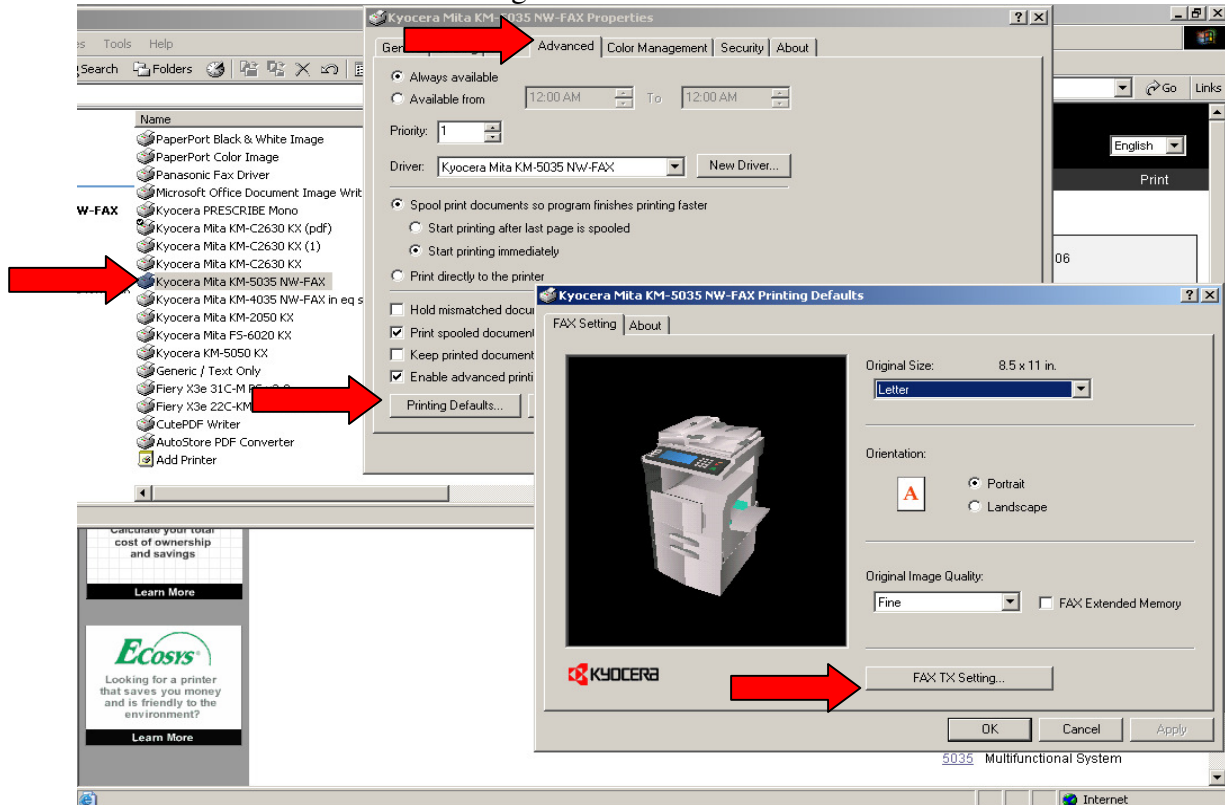
Click the machine setting tab and enter the **IP address of the Scanner card**. (Printer for KM 1815 /1820 only).
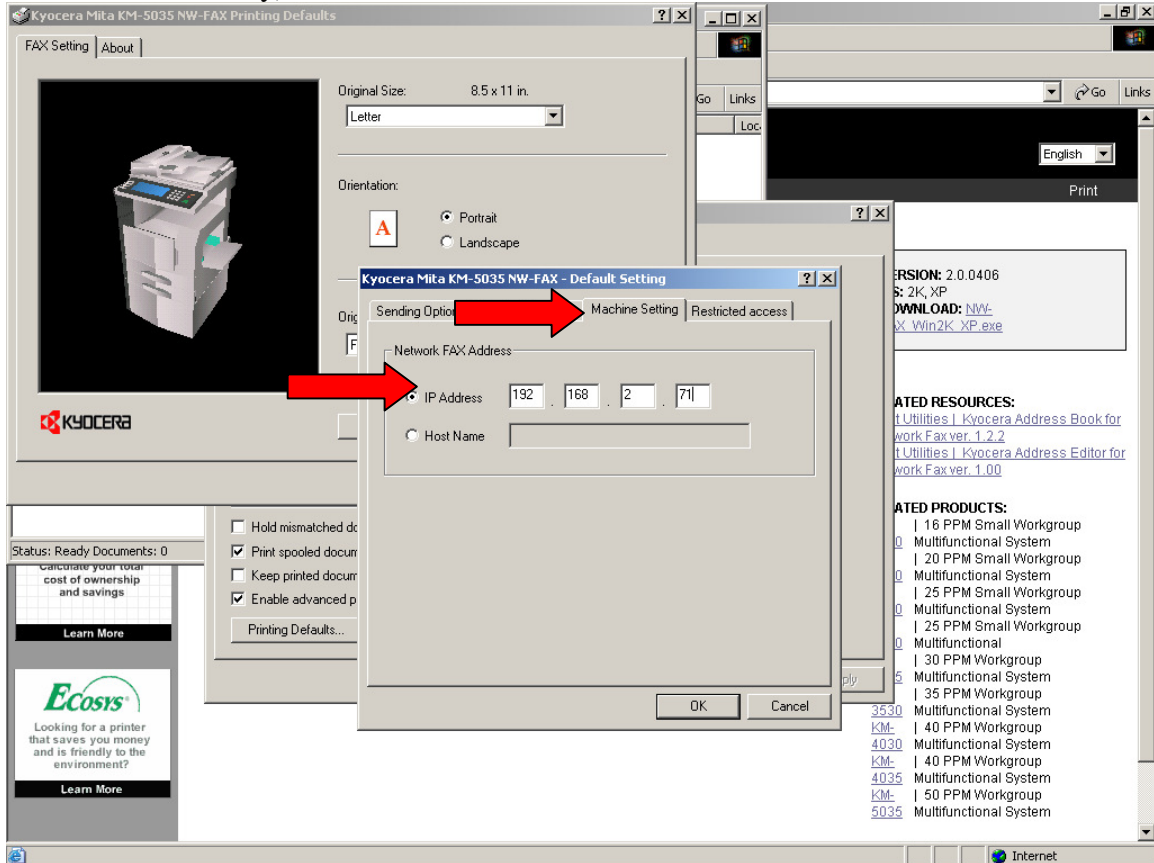
Optional settings: Select cover page if desired on the **Sending Options** tab.
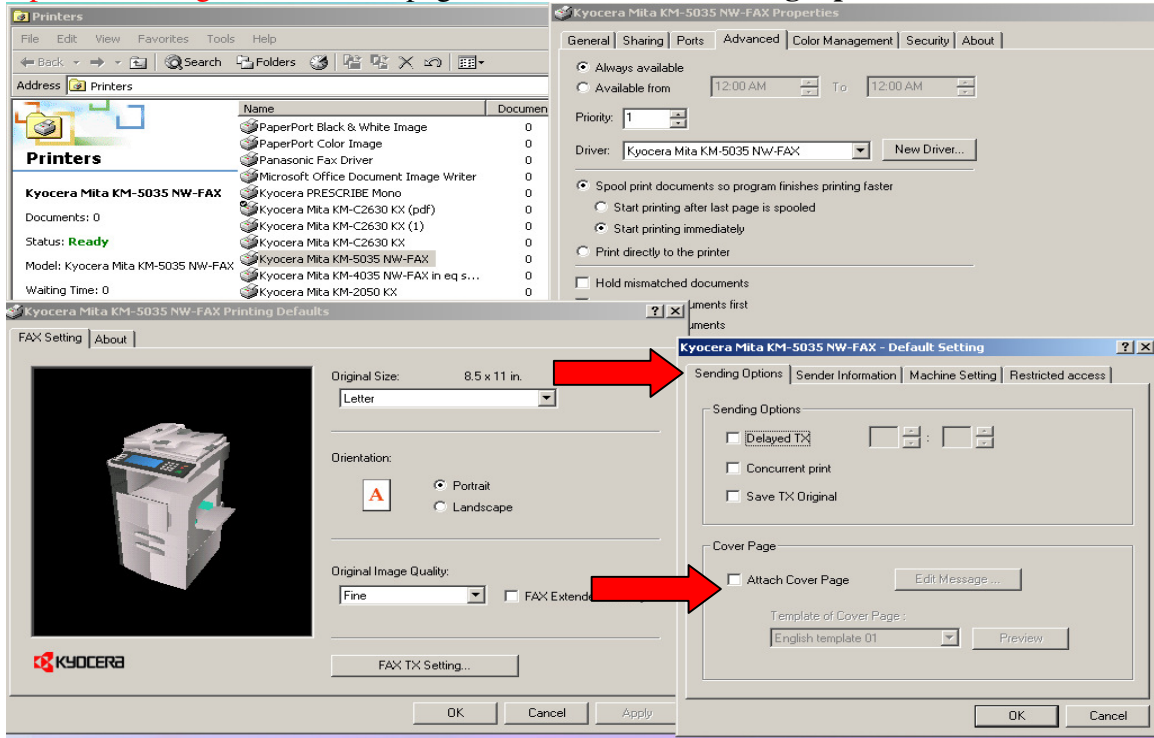
Enter any other desired end user information on the **Sender information** tab.
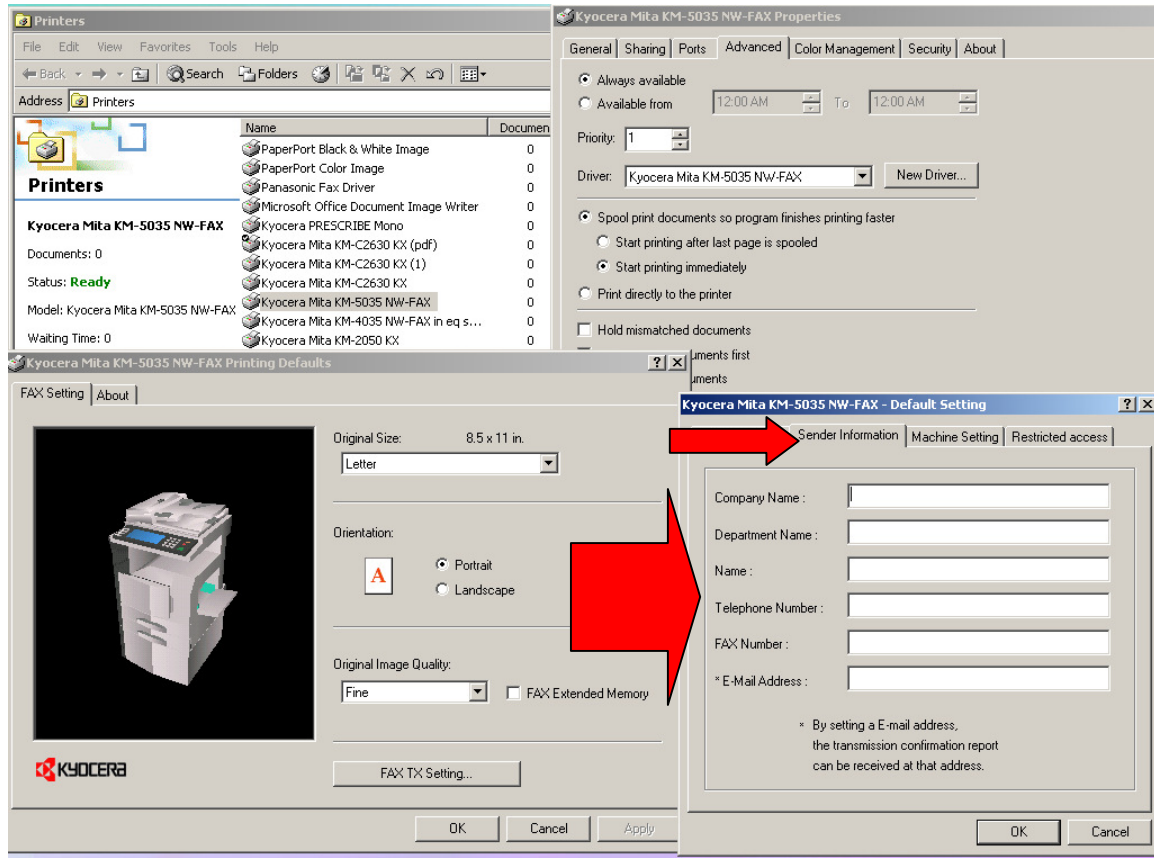
Click **OK to close all windows** to complete the installation.
Congratulations, the installation is successful.
To test, open a test document, print to the fax driver printer that was created. A window will open for the fax number to be entered.
Click **add to destination list** and click **send**. The document will be transmitted via fax.

An additional address book utility can be loaded to save frequent user numbers from http://ca.kyoceramita.com/KMCAGlobalpub/jsp/Kyocera/resource_details.jsp?rid=14109

Special note for specific computers and windows XP SP2: If the net fax driver works but an error is displayed, you may need to change the port for the driver from LPT1 to standard TCP/IP of the printer card IP address.